


## Use of Ball Valve

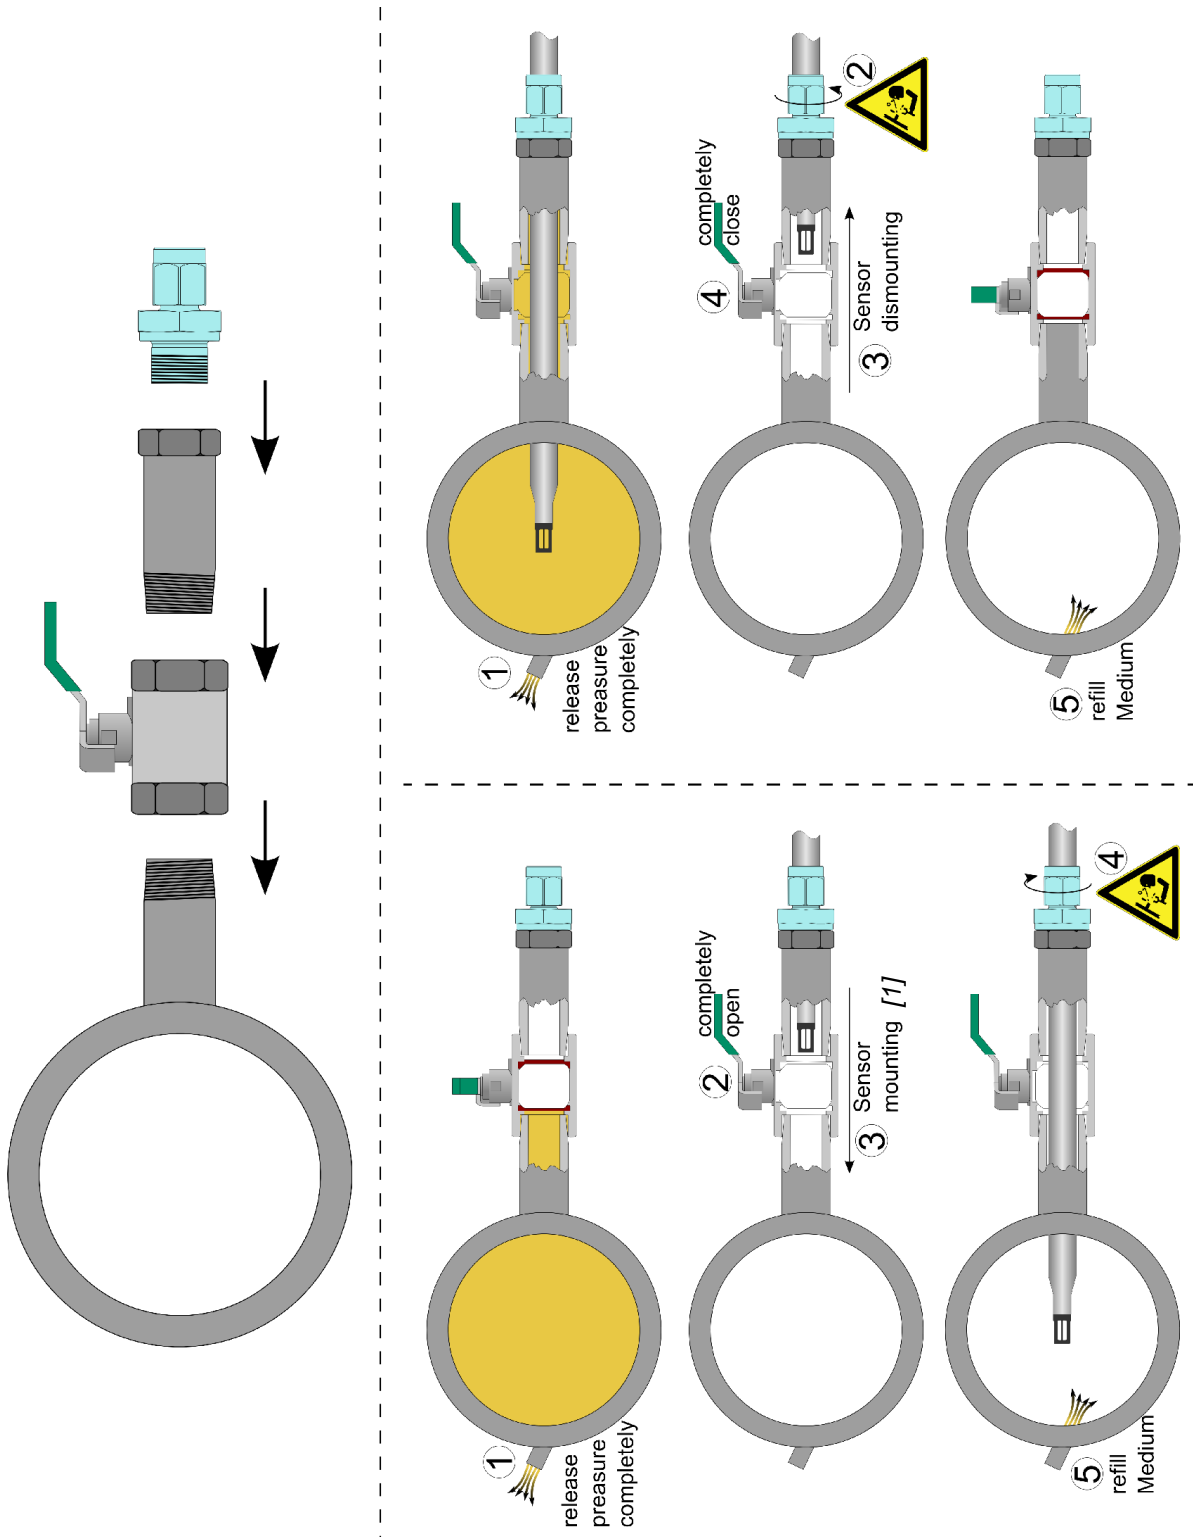

[1] Please also read the Sensor specific instructions!